



Relay ELD quick start guide

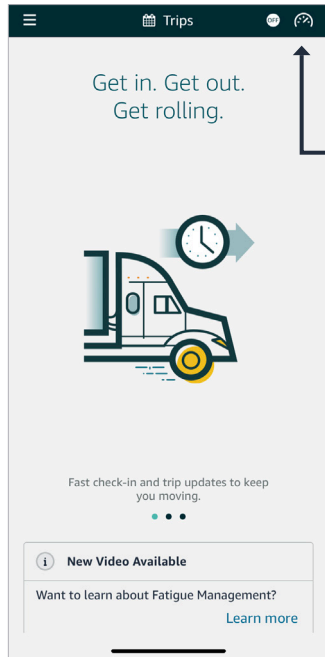


- 1 Open the Relay ELD feature in Relay Mobile

If you don't see the icon, log out of Relay Mobile and back in again. Call your manager if this doesn't resolve the issue.

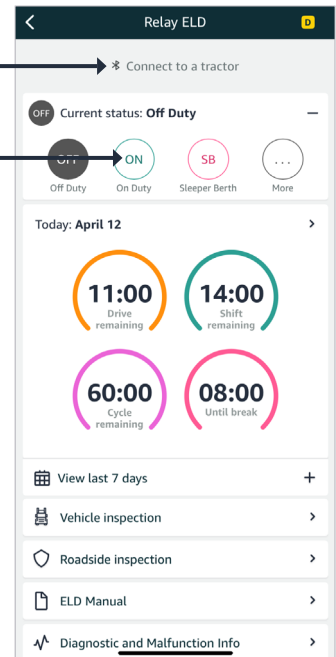

- 2 Connect to your vehicle by selecting 'Connect to a tractor'

- 3 Select 'ON' to go On Duty

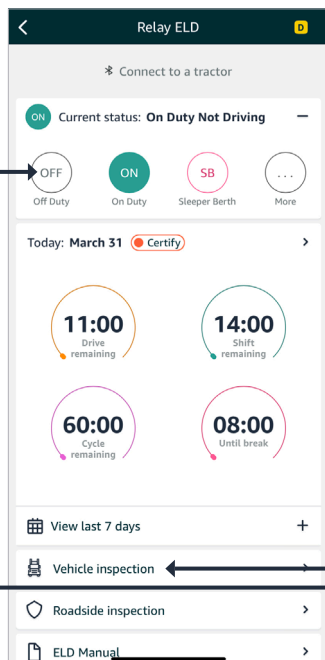

- 4 Select 'Vehicle inspection' and complete your pre-trip DVIR inspection; hit 'complete' when done

- 5 Run your loads

Note: ELD will automatically switch between 'Driving' and 'On Duty' based on vehicle movement as long as you remain connected to the vehicle.

- 6 Select 'Vehicle inspection' to complete your post-trip DVIR

- 7 Select 'OFF' to go Off Duty